


Assembly instructions


WETLANDS TABLE

STEP 1:

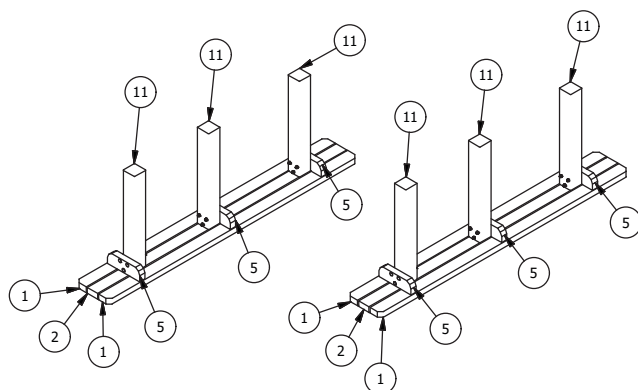

Using M10x170 cup head bolts, mount legs to underside of seats.

STEP 2:

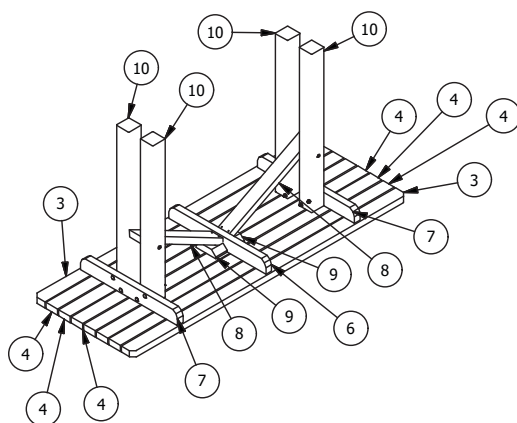


Using M10x170 cup head bolts, mount legs to underside of table.

STEP 3:

Put braces into place. Bolt through with 300mm Allthread and tamperproof nuts. Then Screw brace to centre blocks using 10gx75 screws.

FLAT PACKED TABLE ON ARRIVAL

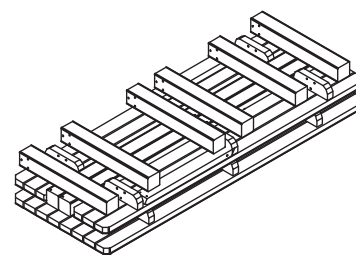

Parts List - Per Table

Item	Qty	Assembly Name
1	4	100x50@2400 Envire (IR)
2	2	100x50@2400 Envire (IR)
3	6	100x50@2400 Envire (IR)
4	2	100x50@2400 Envire (IR)
5	6	100x50@310 Envire (IR)
6	1	100x50@850 Envire (IR)
7	2	100x50@850 Envire (IR)
8	2	100x50@830 Envire (IR)
9	2	100x50@170 Envire (IR)
10	4	110x110@1200 Envire (IR)
11	6	110x110@800 Envire (IR)
12	26	M10x170 Gal Cup Head
13	26	M10 Washer
14	26	M10 Nut
15	8	10Gx75 Bugel Batten
16	84	14Gx100 Bugel Batten
17	2	10mm@300 Gal Allthread
18	4	M10 Tamper Proof Nut

TOOLS REQUIRED:

- Hammer
- 16mm Spanner
- Tamperproof tool

