


# Little Desert Seat - Bolt Down

## ASSEMBLY INSTRUCTIONS

PRODUCT CODE: SEAT201 (1800mm) & 200 (2400mm) - BD

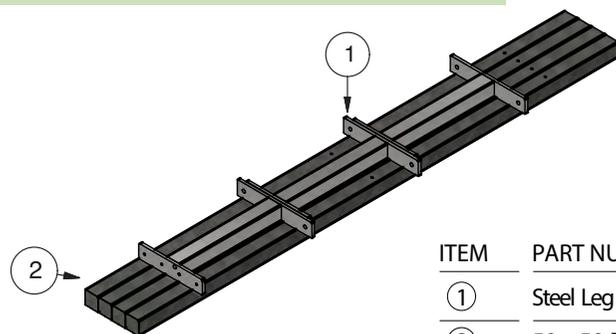

ITEM	PART NUMBER
①	Steel Leg Frames (x3)
②	50 x 50 Envire Slats (x4)

FLAT PACK ON ARRIVAL

### SUPPLIED BOLT PACK INCLUDES

Qty	Description
12	M16 x 70 Coach Bolts
12	M16 Washers
12	Tamper proof Nuts

### TOOLS REQUIRED


- Shifting wrench to tighten nuts
- Hammer to assist bolts through

### WE ARE HERE TO HELP

If you need to know about IR's range of recycled plastic products, please call our knowledgeable staff on 1300 729 253 or email [info@integratedrecycling.com.au](mailto:info@integratedrecycling.com.au)


### STEP 1

#### LAY OUT LEGS READY

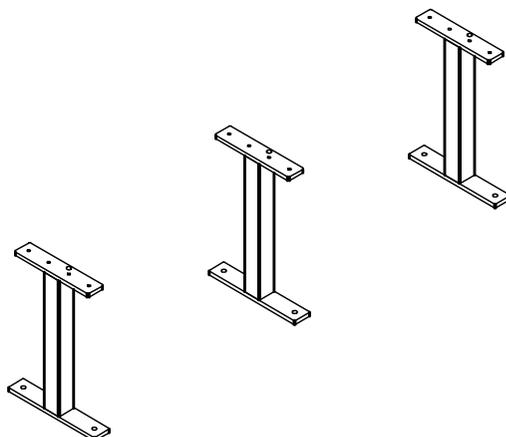

### STEP 2

#### INSTALL SLATS

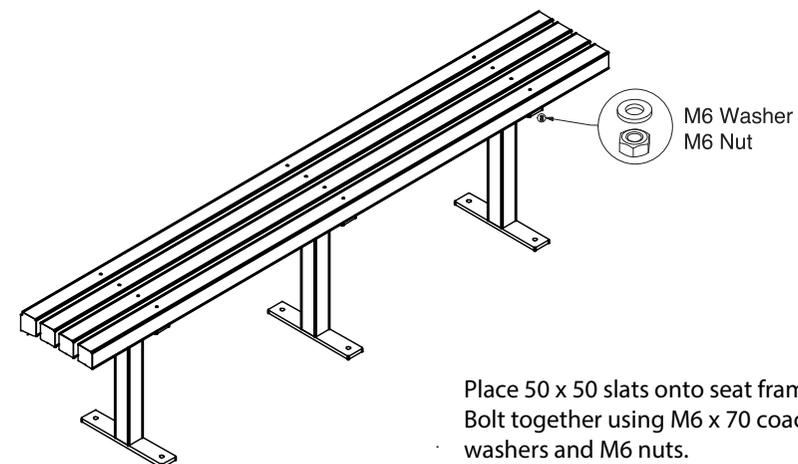

Place 50 x 50 slats onto seat frames.  
Bolt together using M6 x 70 coach bolts,  
washers and M6 nuts.  
Square up slats before tightening.