


# Murray Picnic Setting

## ASSEMBLY INSTRUCTIONS

PRODUCT CODE: ODF101

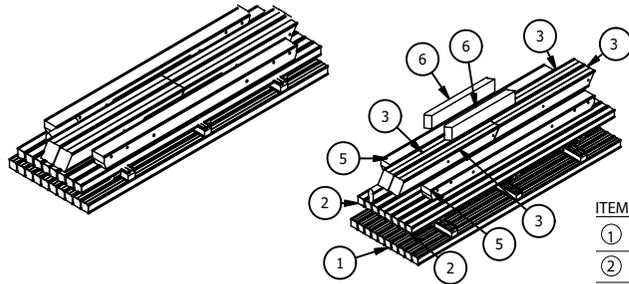

ITEM	PART NUMBER
①	Table top (x1)
②	Seat tops (x2)
③	90x90 Legs (x4)
⑤	Main Supports (x2)
⑥	ODF 101 100x50 Braces (x2)

### FLAT PACK ON ARRIVAL

### SUPPLIED BOLT PACK INCLUDES

Qty	Description
12	Cup Head Bolts M10 x 150 Gal
4	Cup Head Bolts M10 x 170 Gal
12	M10 Gal Washers
4	M12 Gal Washers
12	M10 Gal Nuts
4	M10 Prolock Anti theft barrel nut Gal
4	Battern Screws 14g x 125 Gal
8	Battern Screws 10g x 75 Gal
1	Anti theft tool


### TOOLS REQUIRED

- Shifting wrench to tighten nuts
- Hammer to assist bolts through
- Drill with Phillips head, 5mm Allen key bit, for driving supplied screws into place and tighten tamperproof nut with supplied tool

### WE ARE HERE TO HELP


If you need to know about IR's range of recycled plastic products, please call our knowledgeable staff on 1300 729 253 or email [info@integratedrecycling.com.au](mailto:info@integratedrecycling.com.au)

#### STEP 1

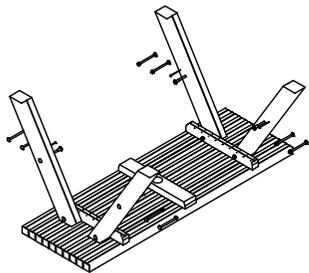


To attach the legs, fit the M10 x 150 coach bolts supplied through the legs into the predrilled holes on the table top. Tighten washer and nuts to 90% (to allow for final adjustment).

#### STEP 2

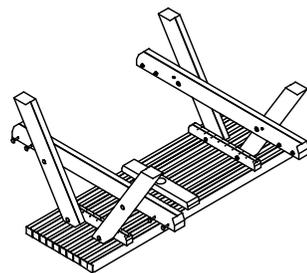


Fit main support members. Face label outwards and larger 14mm holes inwards on both. Use M10 x 170 coach bolts through legs into main support. Use M16 washer and tamperproof nut and tighten to 90% to allow for final adjustment.

#### STEP 3

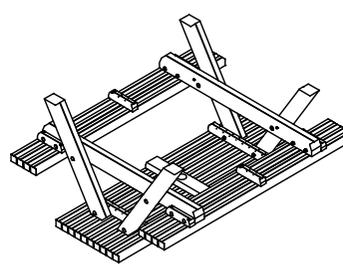

Fit seats using M10x150 coach bolts through seats into main supports. Use washer and nuts and tighten to 100%


#### STEP 4

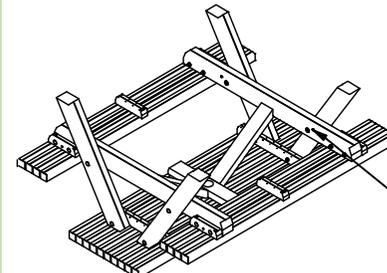

Fit braces. Position them on side of the center cross member on the table top. Making sure they are centered on table. Screw using 10g x 75 screws into table top cross member, then main support. Caution to keep positions between braces and the main supports the same. Add tension to the brace by using your knee on brace for tighter fit when screwing.

Locking Screw location on each leg. Use 14gx125 screw

#### STEP 5

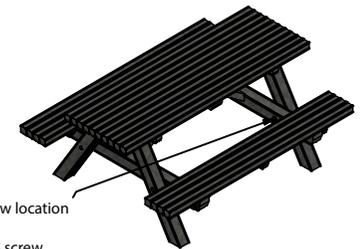

Being careful not to damage setting, turn over. To level, use tape measure to adjust table top equal from each corner to the ground. Once achieved finish tightening all bolts. Finally, drive 14gx125 screws into predrilled holes located next to tamperproof nuts. This will lock main support to leg angle. Your setting is now complete. Enjoy!