


Tasman Bench

ASSEMBLY INSTRUCTIONS

PRODUCT CODE: PFTAS-EN18

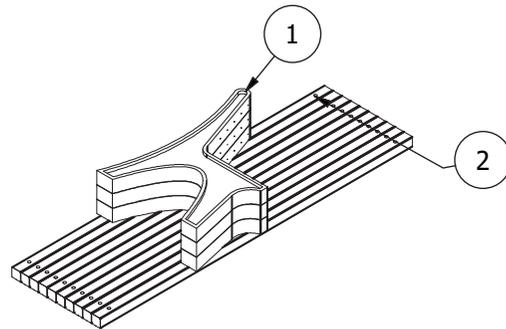

ITEM	PART NUMBER
①	50x50 Envire Slats (x10)
②	Tasman Legs (x3)

SUPPLIED BOLT PACK INCLUDES

14g x 100 Bugle Batten Screw = 30

TOOLS REQUIRED

- Drill with 5mm Allen key bit, for driving supplied screws into place


WE ARE HERE TO HELP

If you need to know about IR's range of recycled plastic products, please call our knowledgeable staff on 1300 729 253 or email info@integratedrecycling.com.au

FLAT PACK ON ARRIVAL


STEP 1

LAY OUT LEGS READY

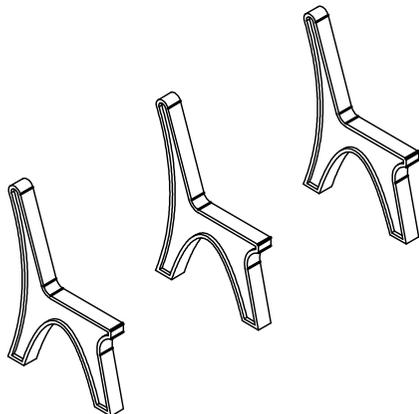

STEP 2


INSTALL SLATS

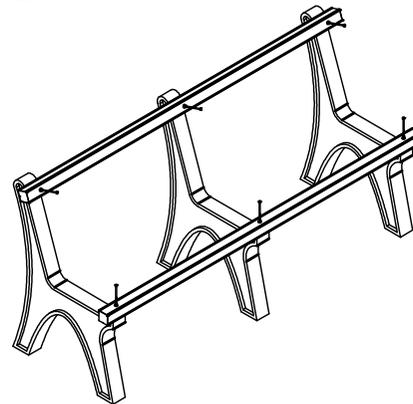

Place 50 x 50 slats onto seat frames.
1 on seat, 1 on backrest.
Screw into place with 14g x 100 screws
into predrilled holes.

STEP 3

FIT SEAT

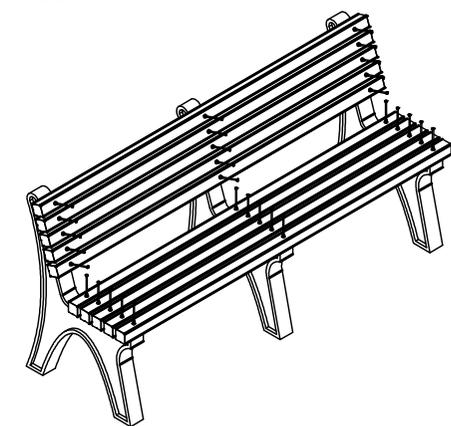

Screw remaining slats into place using 14g x 100
screws into predrilled holes.