


Wetlands Picnic Setting

ASSEMBLY INSTRUCTIONS

PRODUCT CODE: ODF103-CI

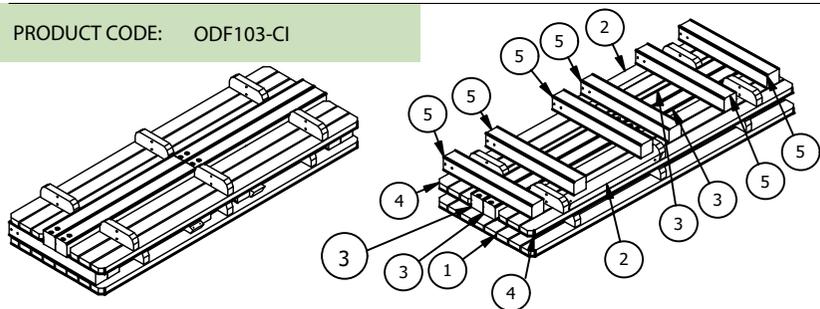

ITEM	PART NUMBER
①	Table Top (x1)
②	Table Braces (x2)
③	Table Legs (x4)
⑤	Seat Tops (x2)

SUPPLIED BOLT PACK INCLUDES

Qty	Description
20	Cup Head Bolts M10 x 750 Gal
20	M10 Gal Washers
4	M12 Gal Washers
20	M10 Gal Nuts
4	M10 Prolock Anti theft barrel nuts Gal
4	Battern Screws 10g x 75 Gal
2	310mm All thread
1	Anti theft tool

TOOLS REQUIRED


- Shifting wrench to tighten nuts
- Hammer to assist bolts through
- Drill with Phillips head, 5mm Allenkey bit, for driving supplied screws into place and tighten tamperproof nut with supplied tool

WE ARE HERE TO HELP

If you need to know about IR's range of recycled plastic products, please call our knowledgeable staff on 1300 729 253 or email info@integratedrecycling.com.au


FLAT PACK ON ARRIVAL

STEP 1

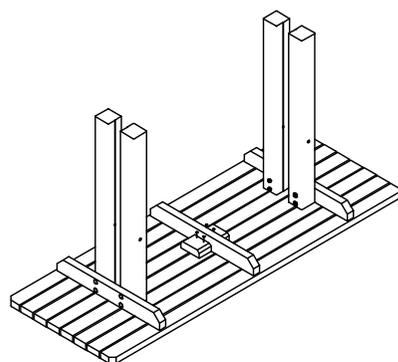


To attach the legs, fit the M10 x 170 coach bolts supplied through the table into the predrilled holes on the legs, fit washer and nut mount into to recessed holes in leg. Tighten washer and nut to 90% to allow for final adjustment.

STEP 2

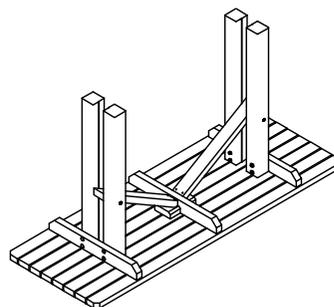


Fit braces. Position them on top of the center bracing mount blocks on the table top. Making sure they are centered in the table screw using 10g x 75 screws into the table top mount block. Then using supplied allthread, M12 washers and tamperproof nuts, knock allthread through predrilled holes in the legs and predrilled hole in the brace. Tighten using tool supplied to 100%.

STEP 3

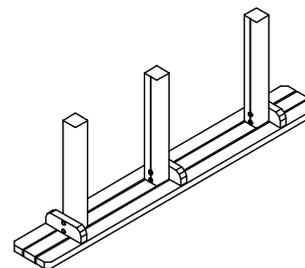

Fit seats using M10x170 coach bolts through seats into legs. Use washer and nut and tighten to 100%

STEP 4

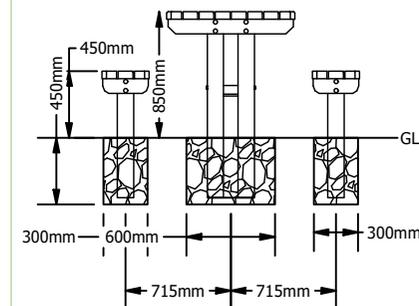

Hole Layout.

Using a tape measure check seat and table height on each end before concreting.

