

Big Desert Seat - Concrete In

ASSEMBLY INSTRUCTIONS

PRODUCT CODE: SEAT210 (2400mm) - CI

SUPPLIED BOLT PACK INCLUDES


Qty	Description
30	M6 x 70 Coach Bolts
30	M6 Washers
30	M6 Nuts

TOOLS REQUIRED

- Shifting wrench to tighten nuts
- Hammer to assist bolts through

WE ARE HERE TO HELP

If you need to know about IR's range of recycled plastic products, please call our knowledgeable staff on 1300 729 253 or email info@integratedrecycling.com.au

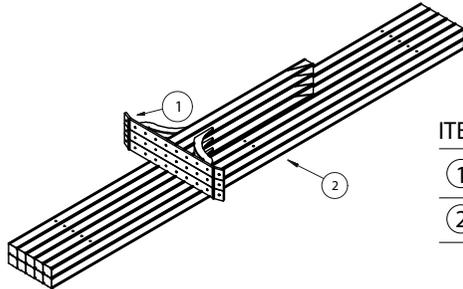


ITEM	PART NUMBER
①	Steel Leg Frames (x3)
②	50 x 50 Envire Slats (x10)


FLAT PACK ON ARRIVAL

STEP 1

LAY OUT LEGS READY

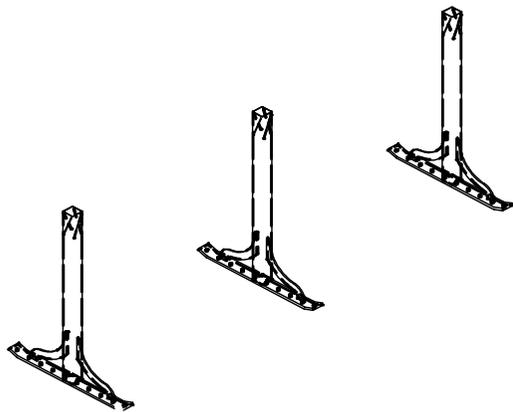


STEP 2

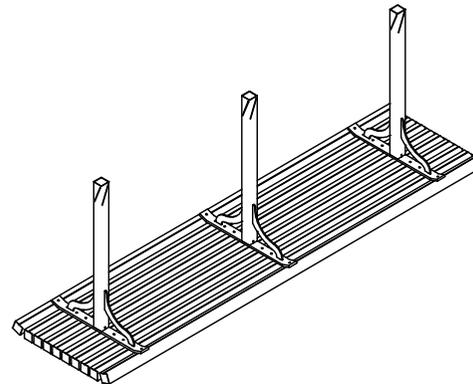

Place 50 x 50 slats onto seat frames.
Bolt together using M6 x 70 coach bolts,
washers and M6 nuts.
Square up slats before tightening.

STEP 3

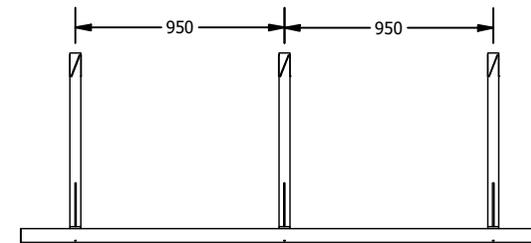

Dig 150mm diameter holes at
950mm centres. Setting to be placed with
seat 450mm above ground level.

