


Mallee Bench Seat Bolt Down

ASSEMBLY INSTRUCTIONS

PRODUCT CODE: SEAT251 (1800mm) SEAT250 (2400mm) - BD

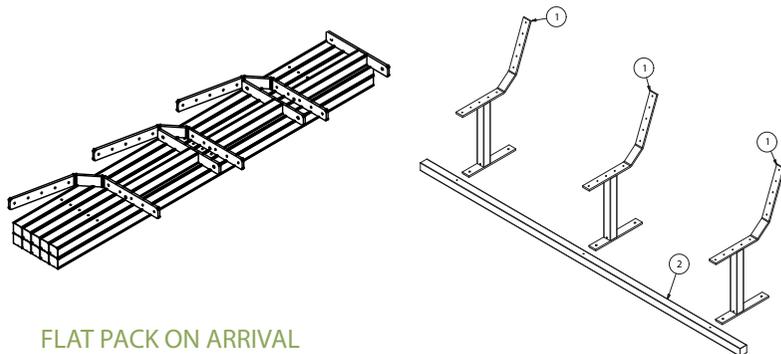

FLAT PACK ON ARRIVAL

ITEM	PART NUMBER
①	Galvanised steel legs (x3)
②	50 x 50 Envire slats (x10)

TOOLS REQUIRED

- Shifting wrench to tighten nuts
- Hammer to assist bolts through

SUPPLIED BOLT PACK INCLUDES


Qty	Description
30	M6 x 70 Coach Bolts
30	M6 Washers
15	M6 Nuts
15	M6 Cap Nuts

WE ARE HERE TO HELP

If you need to know about IR's range of recycled plastic products, please call our knowledgeable staff on 1300 729 253 or email info@integratedrecycling.com.au


STEP 1

LAY OUT LEGS READY

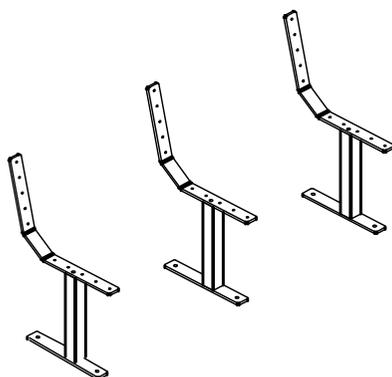

STEP 2


INSTALL SLATS

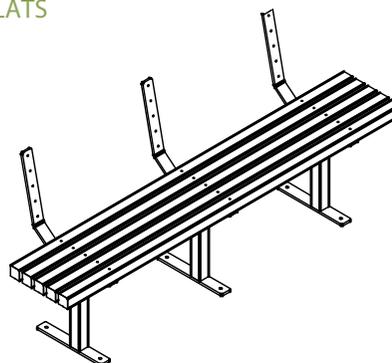

Place 50 x 50 slats onto seat frames.
Bolt together using M6 x 70 coach bolts,
washers and M6 nuts.
Square up slats before tightening.

STEP 3

FIT SEAT

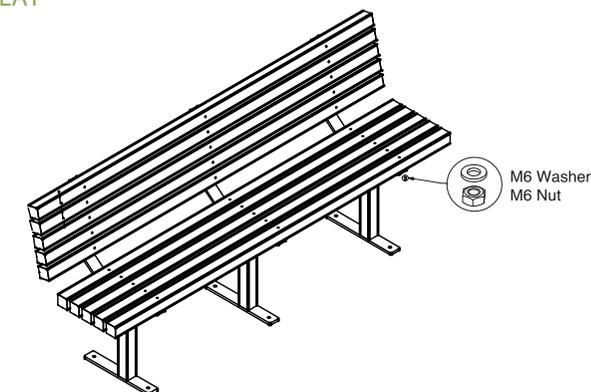

Bolt 50 x 50 slats to back rest using M6 x 70
bolts, washers and M6 cap nuts.
Square up slats before tightening.
M6 cap nuts to be used on backrest profiles.